

SferaZERO
TargetZERO



www.scan-go.eu

Made in Italy





**USE AND
MAINTENANCE
HANDBOOK**

January 2018

SCAN&GO srl
Via della Tecnica 34 A/B - 41051
Castelnuovo Rangone (MO) - Italy
Telefono +39 059798545
info@scan-go.eu

DETAILS and ACCESSORIES

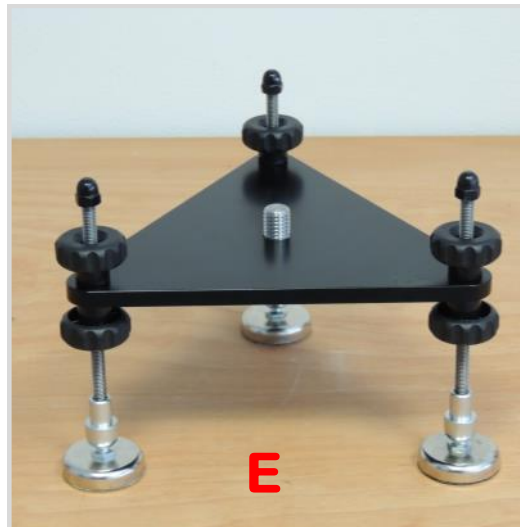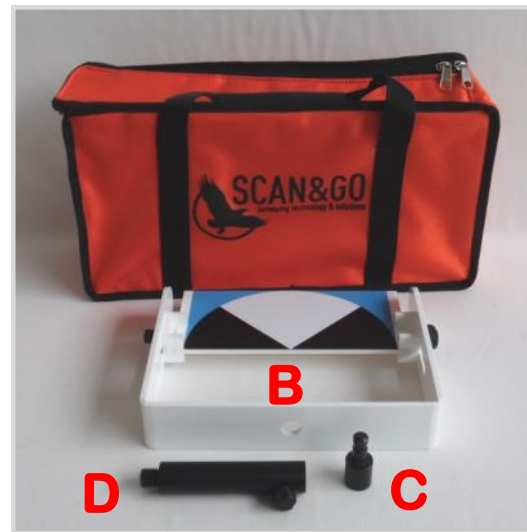

A	SferaZERO
B	TargetZERO
C	Adapter with 5/8" female / Leica pin male
D	Adapter Leica pin female / 5/8" male
E	Magnetic level bracket

INSTRUCTIONS FOR INSTALLATION AND USE

1° STEP

Assembly of SferaZERO or TargetZero



1

Place the GNSS receiver
in the support





2

Screw the adapter **D** to the GNSS receiver, in
order to block the SferaZERO or TargetZERO



3

Pull down the Semisphere or the Target until they reach the receiver.
Lock the two lateral screws

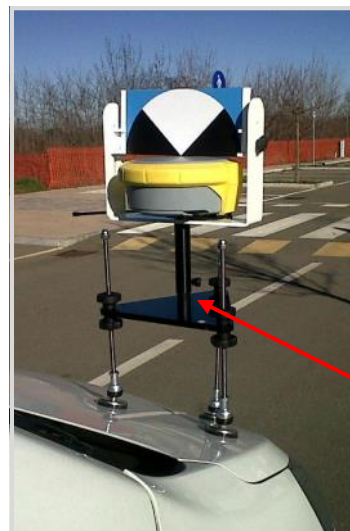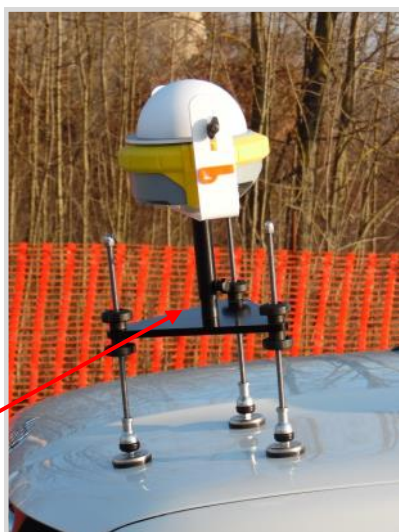

- Install the MAGNETIC LEVEL BRACKET on the vehicle hood
- Screw the adapter **C** at bolt 5/8" present in the centre of the Magnetic Level Bracket
- Place the SferaZERO or TargetZERO on the Magnetic level bracket. Check the locking of the adapter **D** lock



NEW surveying technology & solutions